

Oxygen and acetylene gauges used on Reel Rig™ mounting hardware


Instructions and order of installation.




Step 1: Remove and save these fittings.

These two nipples must be preceded by an elbow fitting, as will be shown on the next page. Be careful to keep them separate as Oxygen thread is different than acetylene

Step 2: Assemble oxygen gauge and parts as shown. Use teflon on threads with no seating end. Read all instructions before you start. do not overtighten.

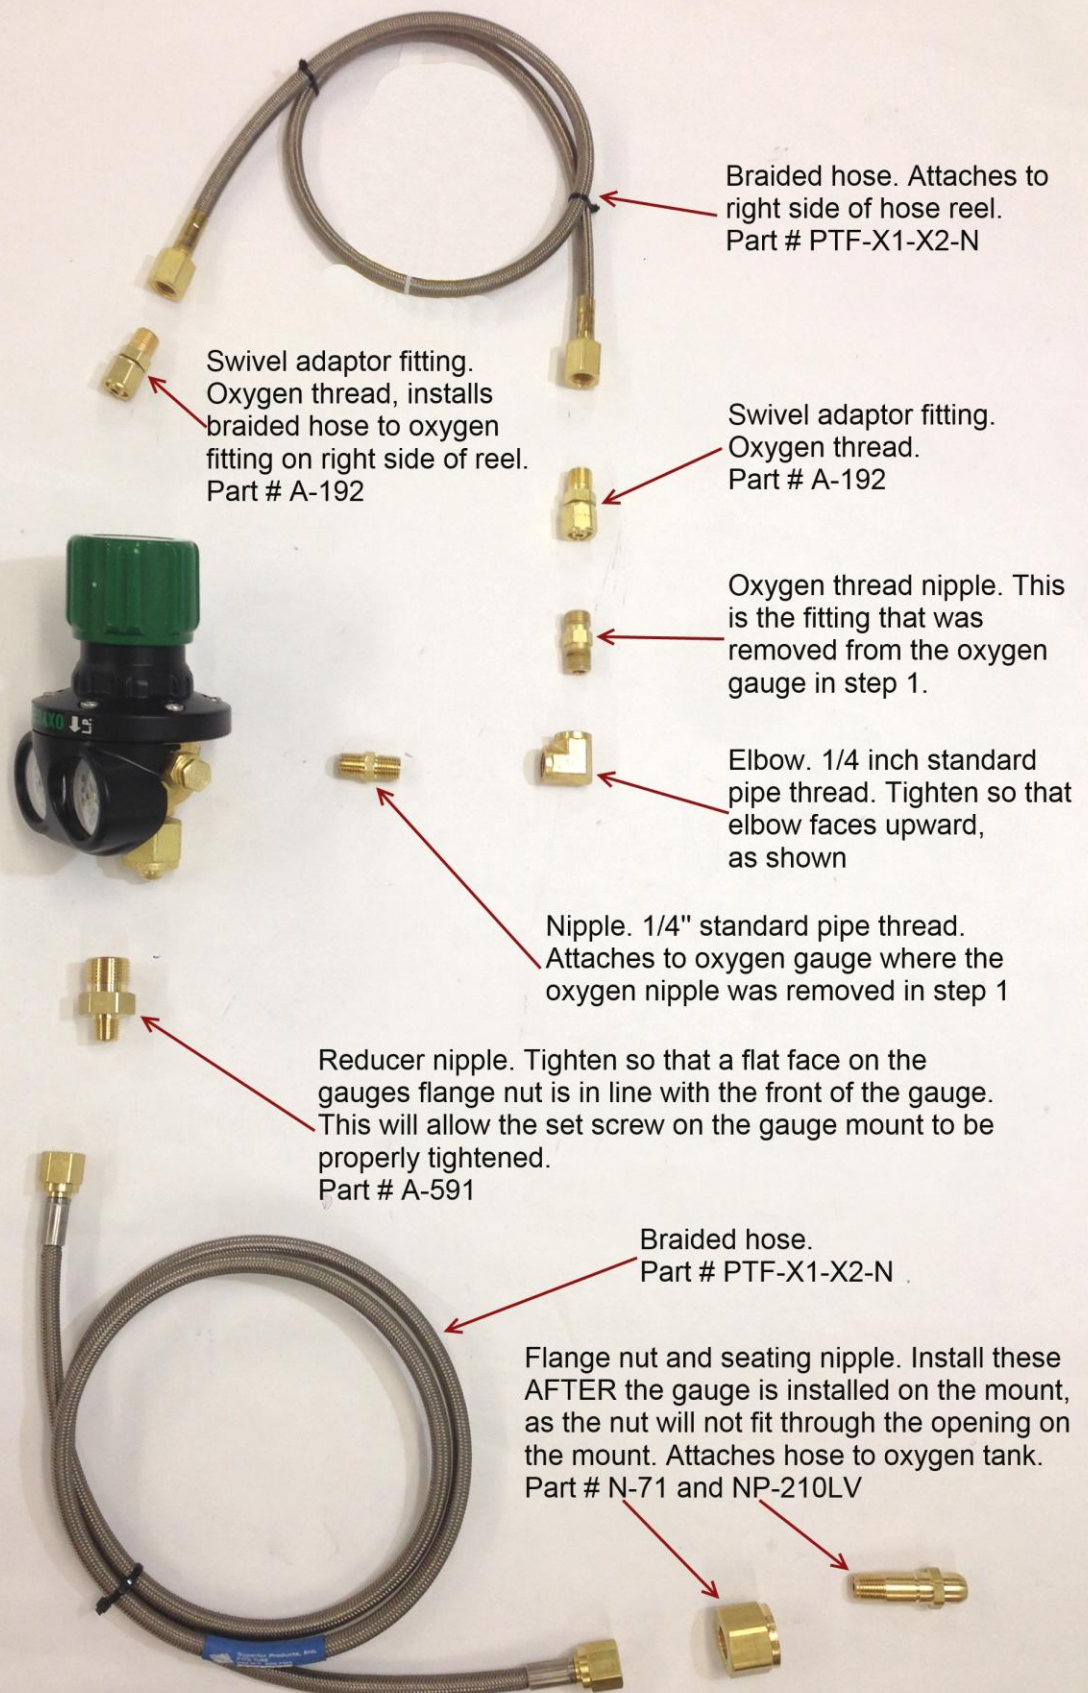

Step 3: Assemble acetelene gauge and parts as shown. Use teflon on threads with no seating end. Read all instructions before you start. Do not overtighten.

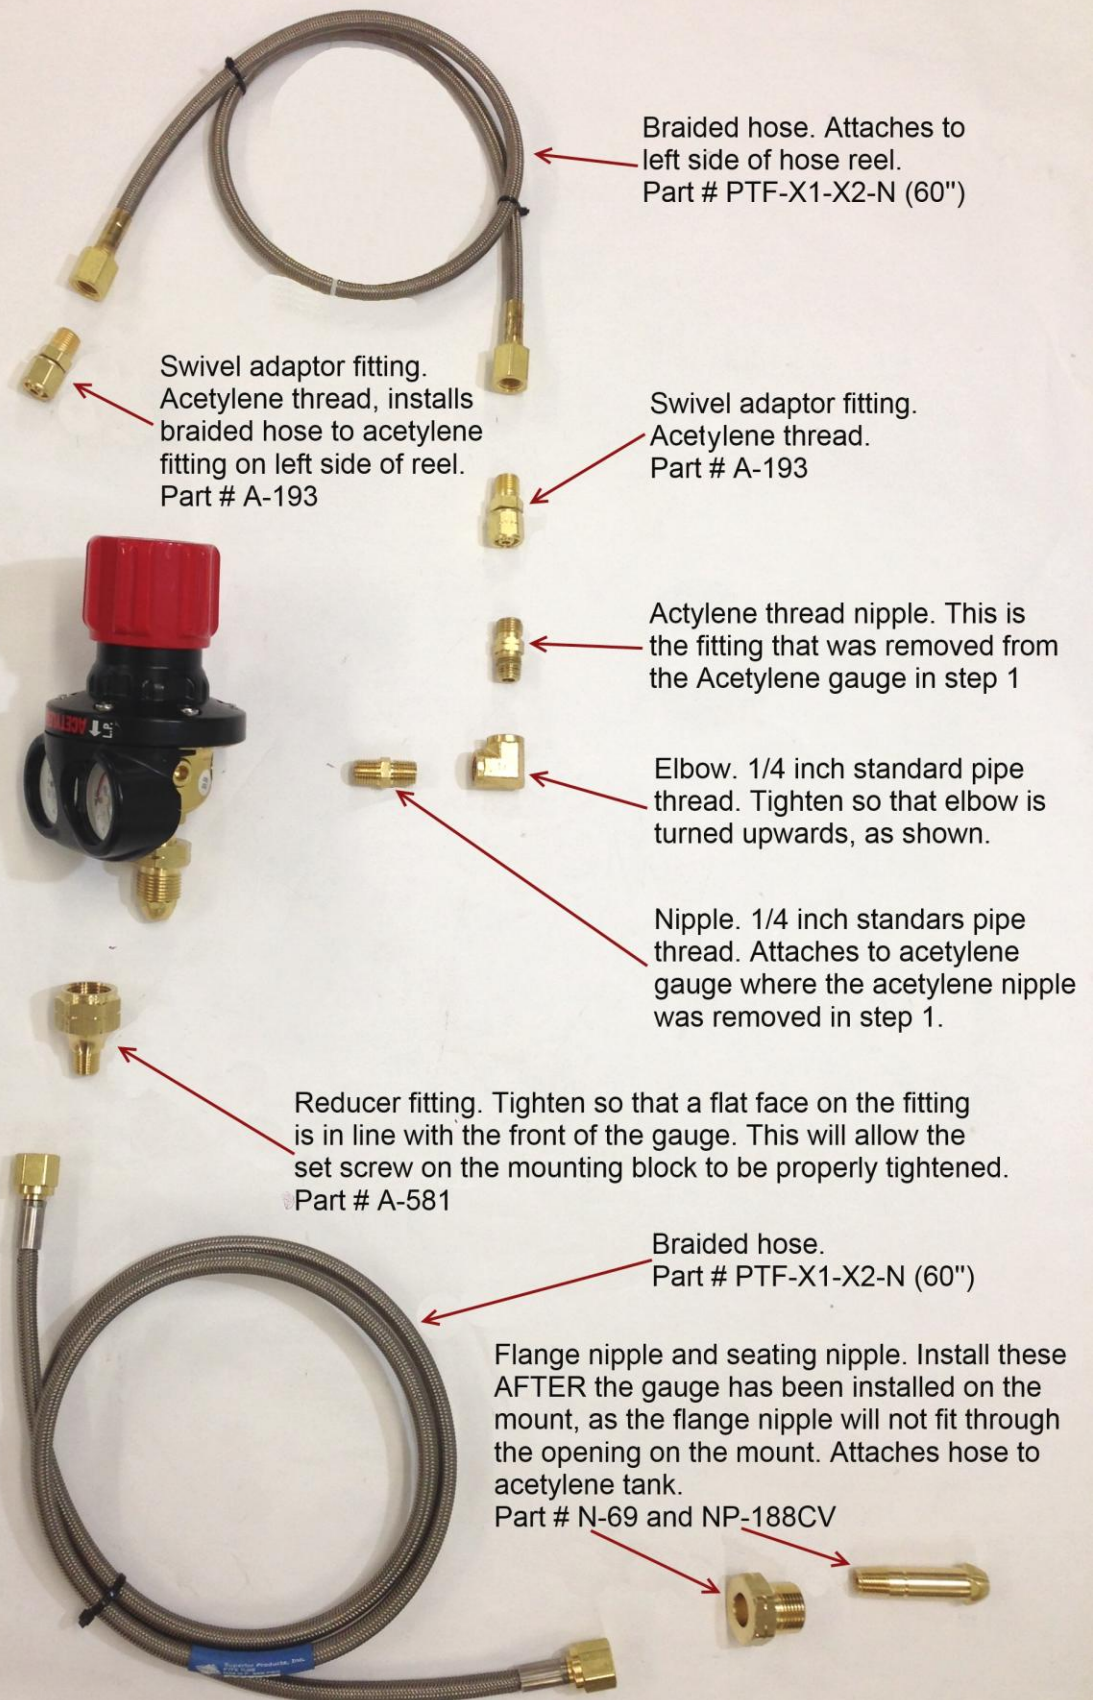

Step 4: Install gauges on gauge mounts.

